



## Руководство пользователя беспроводной системой вызова клиентов «Leetek LTK-1100L»

### 1. INSTALLATION INSTRUCTION.

1. 1. Lock the antenna to the right corner of the Transmitter-TX (Центральный пульт — TX). Fit over plug and twist left to lock antenna in place)
1. 2. Plug the A/C adaptor into the Transmitter-TX and then into a standart outlet. A surge protector is recommended.
1. 3. If more then one charging base is used, connect base units with jump wires.
1. 4. Insert the pagers-TX (пейджер клиента-TX) on the charges. A charging indicator will illuminates to indicate charging. Pager-TX will be fully charged in 2 hours.

### 2. SYSTEM SETTING.

To enter programming mode, press the “SETUP” button and enter the password “1379” followed by “ENTER”. If the password is accepted, the display will show “use \* to scroll to menu option”.

Use the “\*/Menu” key to scroll throught the several menu options or press “CANCEL” to exit the system setting menu.

#### 2.1. Set Current Time

With this feature, you can setup current time into the Transmitter-TX.

- ▲ At the “Set Current Time” menu, set the hour and then press “ENTER” key.

- ▲ Set the minutes and press “ENTER” key.
- ▲ Use “#/Select” key to select AM or PM.
- ▲ After the correct time is set, press the “ENTER” or “\*/Menu” key to return to the main menu or press the “CANCEL” key twice to exit the system setting menu.

#### 2.2. Set Sleep Time.

With this feature, you can turn off pagers-TX at once automatically.

##### To turn this features OFF

- ▲ Press “#/Select” key to turn the feature “OFF”.
- ▲ Press “ENTER” to go back to th main menu.

##### To change the sleep time

- ▲ Press “#/Select” key to turn the feature “ON”.
- ▲ Set the hour and then press “ENTER” key.
- ▲ Set the minutes and press “ENTER” key.
- ▲ Use “#/Select” key to select AM or PM.
- ▲ After suitable time is set, press the “ENTER” or “\*/Menu” key to return to the main menu or press the “CANCEL” key twice to exit the system setting menu.

#### 2.3. Range Test.

With this feature, you can find out how far your Transmitter-TX will cover.

- ▲ Remove a couple of pagers-TX from charger base.
- ▲ At the range test menu, press “#/Select” key to turn range test “ON”.
- ▲ Press “ENTER” to start th range test. As soon as range test is activated you 'll notice the pagers flash once per every 10 seconds.

#### 2.4. Pre Set Message.

With this feature, you can pre-set message used frequently.

- ▲ At the Pre Set message menu, press “#/Select” key to turn Pre Set Message “ON” or “OFF”.
- ▲ After Pre Set Message is set, press the “ENTER” or “\*/Menu” key to return to the main menu or press “CANCEL” key twice to exit the system setting menu.

#### 2.5. Pager Alert.

With this feature, you can have the option of changing the way your pagers alert. Be sure that all pagers are returned before performing this procedure.

**To change the alert mode of your pagers, follow these instructions:**

- ▲ Remove all the pagers from the charger base or unplug the power supply that is connected to the charger base.
- ▲ At the “Set Pager Alert” menu, press “#/Select” key scroll through the different alert options.
- ▲ After making a selection, press “ENTER” key 3 times. After sending the message, the pagers will now respond with your new selected alert mode.
- ▲ Return all the pagers to the charger base or plug the power supply. The pagers are ready to receive the page with its new alert mode.

**2.6. Set Pager ID (IQ Charger Transmitter Only).**

With this feature, you can have the option of changing th IDs.

**To change the ID of your pagers, follow these instructions:**

- ▲ At the “RX Read Mode” menu, press “#/Select” key scroll through the different options (1.Base Id 2.S/N).
- ▲ After making a selection, press “ENTER” key. Your pagers information (Base ID, or S/N) will be displayed on the LED display.
- ▲ At the “RX Read Mode” menu, press “\*/Menu” key scroll through the different options (1. Set indivi ID. 2. Set the same ID. 3. Set RX Base ID).
- ▲ After making a selection, press “ENTER” key. You are now able to enter the setting values.
- ▲ Press “ENTER” key to complete the setting.

**2.7. Duty Alert.**

With this feature, you can enable your transmitter to send a page, at a preset time, to a certain pager to remind them of a duty required of them. For example, a buzzer can receive a page every 3 minutes to remind him to check the restroom. You can assign up to 3 different group to be duty alert pagers.

**To program the duty alert:**

- ▲ At the “Duty Alert” menu, press “#/Select” key to turn the duty cycle “ON” and press the “ENTER” key.
- ▲ Enter the duty pager number and press “ENTER” key.
- ▲ Enter the cycle time (in minutes) and press the “ENTER” key.
- ▲ Enter the numeric message.

- ▲ After setting the duty alert function, press “ENTER”.
- ▲ Display will show “Duty \_\_saved”